

Parts Included


- Finial x1
- Yoke x1
- Post x1
- Decorative Spacer x1
- Wood Base x1
- Bolt x1

Step 1

Place Bolt through the Wood Base and Decorative Spacer. Tighten to the Post using the supplied Allen wrench.

Step 2

Place threaded end of the Finial through the Yoke and tighten to the Post by twisting clockwise.

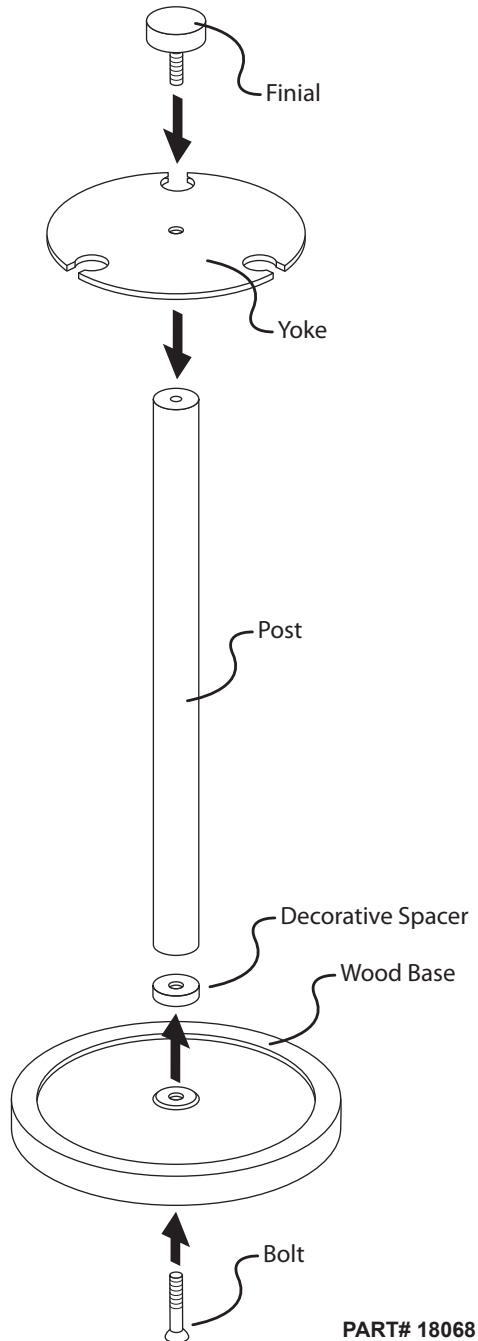

Thank you for your purchase.

PART# 18068
PART# 18069