


Parts Included

- Finial x1
- Yoke x1
- Post x1
- Base x1
- Bolt x1

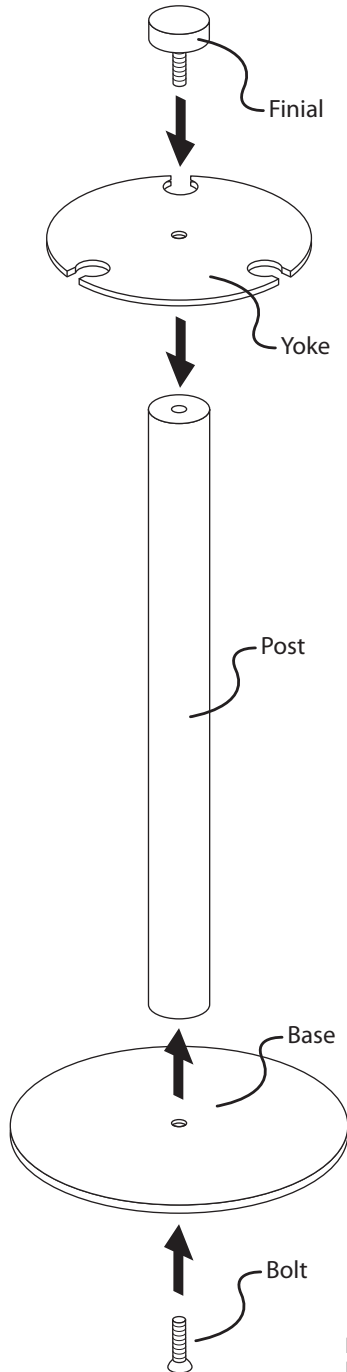

Step 1

Place Bolt through the Base and tighten to the Post using the supplied supplied Allen wrench.

Step 2

Place threaded end of the Finial through the Yoke and tighten to the Post by twisting clockwise.