



## Andiron Assembly Instructions - Fonda, Grand Tower, Gosham and Stapleton

### **Parts Included**

Andirons x2


Legs x2

Bolts x2

Nuts x2

### **Step 1**

Place Bolt through the Leg and Andiron and secure with the Nut provided. Use supplied Allen wrench to tighten Bolts down.

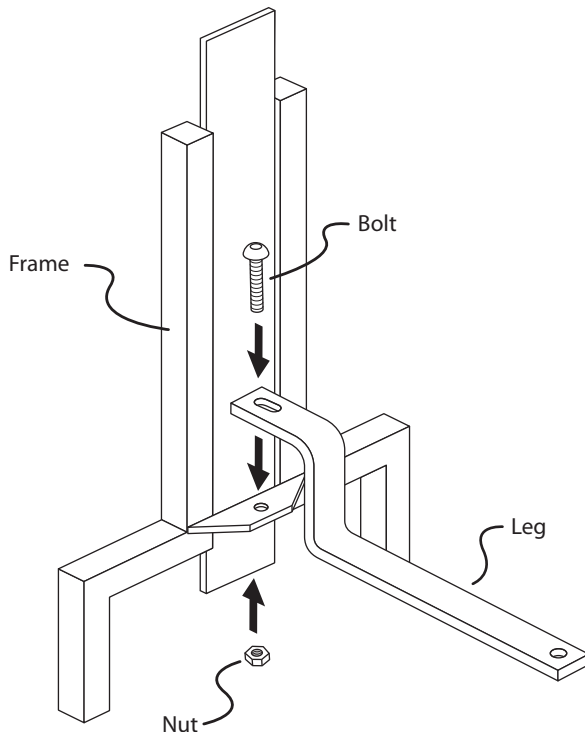

PART# 18669  
PART# 18670  
PART# 18671  
PART# 18673  
PART# 18674  
PART# 18675  
PART# 18676