



Andiron Assembly Instructions - Fonda, Grand Tower, Gosham and Stapleton

Parts Included

Andirons x2


Legs x2

Bolts x2

Nuts x2

Step 1

Place Bolt through the Leg and Andiron and secure with the Nut provided. Use supplied Allen wrench to tighten Bolts down.

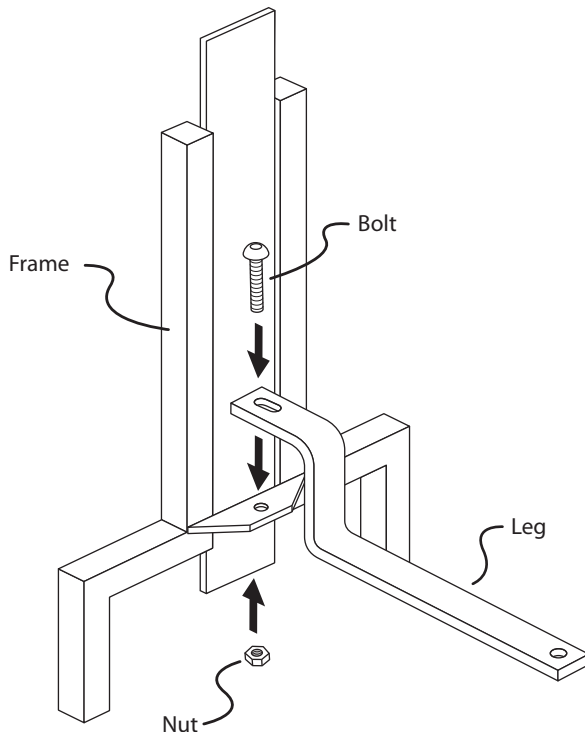

PART# 18669
PART# 18670
PART# 18671
PART# 18673
PART# 18674
PART# 18675
PART# 18676